





Insert SIM card

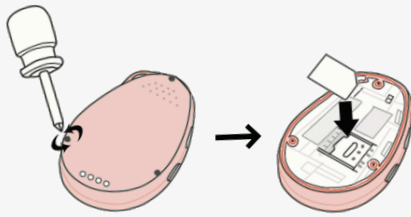

Before installing the SIM card, check if it has PIN code or not. If yes, use a mobile phone to remove the PIN code.

- Unscrew the back cover.
- Insert the SIM card and make sure it's activated.
- Put the cover back and tighten the screws.

Charging your device

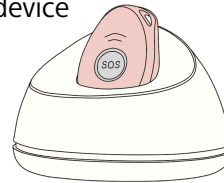


For the first time use, fully charge the battery for 2-3 hours.


- Place the device in Docking Station.
- Connect the USB cable from charging base to the AC adaptor.
- During charging, the LED on the docking station will blink and turn solid when fully charged.

When the battery level falls below 20% it will send a low battery warning text message to people on the contact list.

Switch ON / OFF device

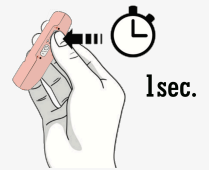


Turn on device by pressing CALL button for 1 second. All LEDs will flash rapidly. The device can also be switched automatically when charging via magnetic USB or put into the docking station.

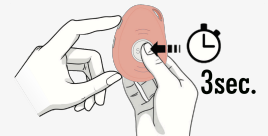

Turn off device by pressing and holding the side button and SOS button together for 3 seconds until the LEDs turn off.

Activating SOS Alarm

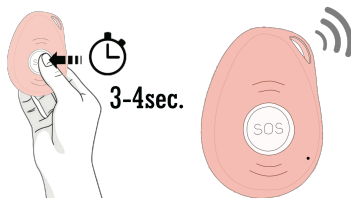


When you need help, press the SOS button for 3-4 seconds until you hear the voice prompt that an SOS alert is triggered. A "Help!" SMS will be sent to your emergency contact number.

- If the connection with the first contact number fails, the device will send the alarm to the second contact 10 seconds later. If this also fails, it sends the alarm to the third contact, and so on.
- The alarm can be stopped within the 10 seconds between the calls by pressing the SOS button again. It can also be stopped by the receiver of the call by pressing 1 on the mobile phone during two way talking. Thus a possible, false alarm can be stopped.

Please remember to program emergency contacts! You can save up to 10 contacts, but you must set up at least one.

Making a Phone Call

- To make a call to a pre programmed number, press side call button for 3 seconds. You will hear a beep.

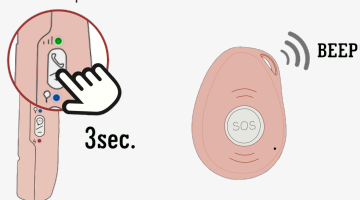


- To end the call press the SOS button.



Silent mode button

- Double-click this button to turn off voice warnings. Double-click again to turn on voice warnings.

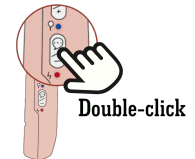

- Press and hold this button and the CALL2 button on charging base for 3 seconds and they will pair to each other via bluetooth.



Lights & meaning:



Further information here

Cellular signal indicator GREEN

Single flash every 3 seconds	The device has a stable cellular signal
Double flash every 3 seconds	The device is registered to the cellular network

Positioning indicator BLUE

Single flash every 3 seconds	The device has no latest location fix
Double flash every 3 seconds	The device has latest location fix
Light off	The device is not fixing the latest position

Power indicator RED

Red ON (permanent)	The device has been fully charged
Double flash every 3 seconds	BLE connected
Red blinking quickly	Battery power is lower than 20%
Red Off or blinking slowly	The device is charging